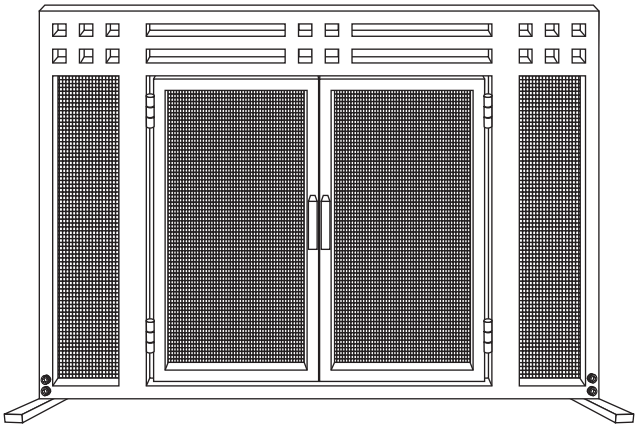

ITEM # : 1000 XXX XXX
MODEL # : DS-21018

# Use and Care Guide

## Layton Fireplace Screen

## Assembly

| Ref.# | Description | Qty. |
|---|---|---|
| A | Fire Screen | 1 |
| B | Feet | 2 |
| C | Bolt | 4 |
| D | Hex Wrench | 1 |

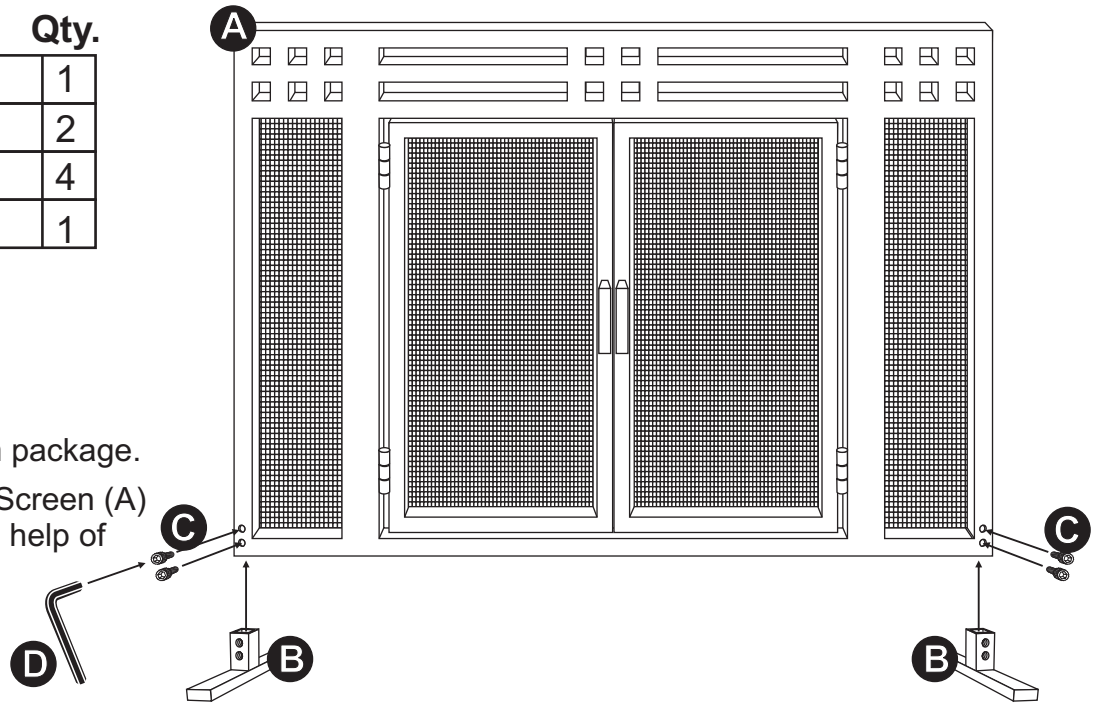


**INSTRUCTIONS:**

1) Remove all contents from package.
2) Attach the feet (B) to the Screen (A) using the bolt (C) with the help of Hex Wrench (D)

## Safety Information

- Do not allow children to play with or around screen.
- Do not attempt to clean the screen while it is hot.
- When screen is in use, do not touch with bare hands.
- Use heat-resistant fireplace gloves when moving or adjusting screen.
- Make sure screen is large enough to completely cover fireplace opening.

## Care and Cleaning

- After screen has cooled down, Lay screen on towel or soft surface and wipe with a soft clothe to prevent scratches or damage to finish.
- To store, fold screen together, place it in box and secure.

## Warranty

This product carries no warranty.

For questions or concerns about this product, contact the Customer Service Team 8:00 a.m. to 5:00 p.m. EST at 1-866-397-9312 or visit www.HomeDepot.com.